


STEAMIST®

InstaMist

Warning: Do not turn on the power to the steam generator until the installation is complete and the unit is ready to test/use. If the steam generator will not be in use for long periods of time (over 6 months) the power to the steam generator should be turned off.

Important: In order for the InstaMist feature to function, water must always be in the tank. For this reason the Optional Auto Drain can NOT be used with any InstaMist generators.

The Steamist InstaMist feature (-IM) is only available as a factory installed option on the following models generators: SM-5, SM-7, SM-8, SM-11, SM-12, SM-15, System-18, System-24, and System-30.

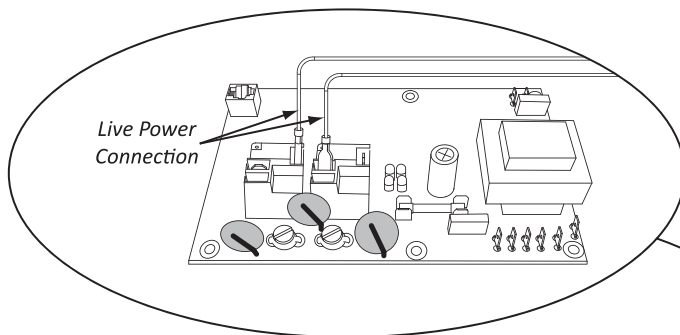

INSTAMIST

The Steamist InstaMist generators feature a pre-heat function, which provides a generous volume of steam in under a minute. This new feature maintains an average water temperature of 180°F in the stainless steel reservoir. When the steam generator is activated, the pre-heated water inside the steam generator quickly reaches the boiling point, allowing steam to flow out in under a minute.

All Steamist steam generators with or without InstaMist are factory assembled and tested. There are no additional Plumbing or Electrical requirements needed in the field for generators with the InstaMist feature. The installation instructions for the plumber and electrician are provided with the steam generator and need to be followed.

